

4. StepOver PadSettings

General

The pad settings string used by `getpadSettings`, `setPadSettings`, `startCapture`, `configurePad` and other functions contains the settings of the signature device. It looks like a human-readable string:

```
000000000000000001blueMPad / bluePad
```

or

```
000000000000000001HID: StepOver GmbH naturaSign Colour (22C9/0601/0000/123456797)
```

The first 15 chars contains the pad ID in case of a +Pad or LE Pad. In case of a bluePad or blueMPad they are set to zero. The char 16-18 contains the number of the comPort. At the end of the string is the written name of the pad type. You may store that string in a secure way in your application to use that settings next time.

For HID signature devices beginning of PadSettings string is always "0000000000000001HID:" followed by signature device name and its parameters (VID/PID/Usage/Serial).