


# SimpleSigner ServerSONET

---NOT IN USE ANYMORE---

## Setup for SimpleSigner over TCP Network

In order to work with SimpleSigner over TCP network you need a client software which is called ServerSONet and Simple Signer. ServerSONet will be started on the computer where the pad is connected to. SimpleSigner will be started with the net- parameter in order to connect to the given Client.

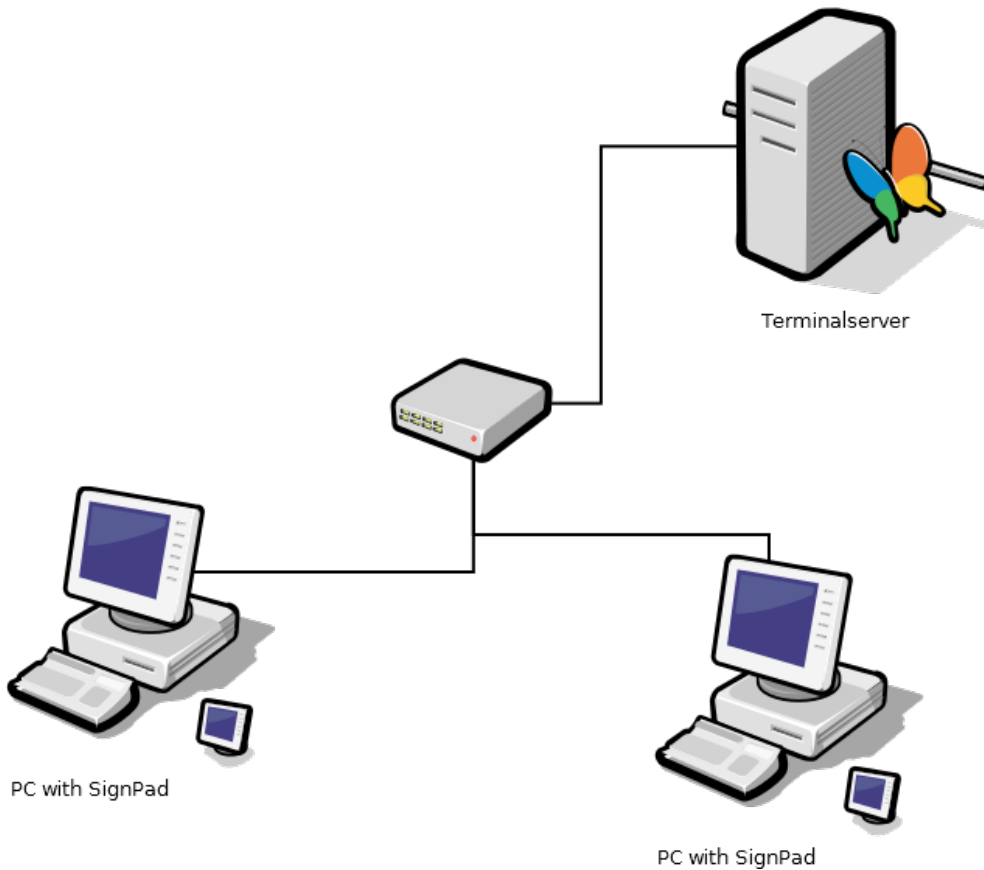

## Using SimpleSigner over TCP Network

Parameter	Usage
net-	This parameter defines TCP address and port of the remote client. Address and port should be entered directly after the net- parameter. <b>net-192.168.0.1:9977</b>

## ServerSONet Parameter

Option	Definition
-n, --hostname = (hostname/IP address)	specify IP address or host name
-p, --port=(service/port)	specify port number or service name
-a, --auto-accept=(seconds)	delay for a specific amount of seconds for auto accept of signature after signing on the pad is completed

-g, --no-gui	run the program without a GUI
-b, --gui-above	run the program with the GUI always on top (may not work always)
-v, --version	shows the version of ServerSONet
-h, --help	shows the help list